
### **KitchenAid** COOKTOP PARTS


30" SLIDE-IN ELECTRIC OVEN SELF CLEAN

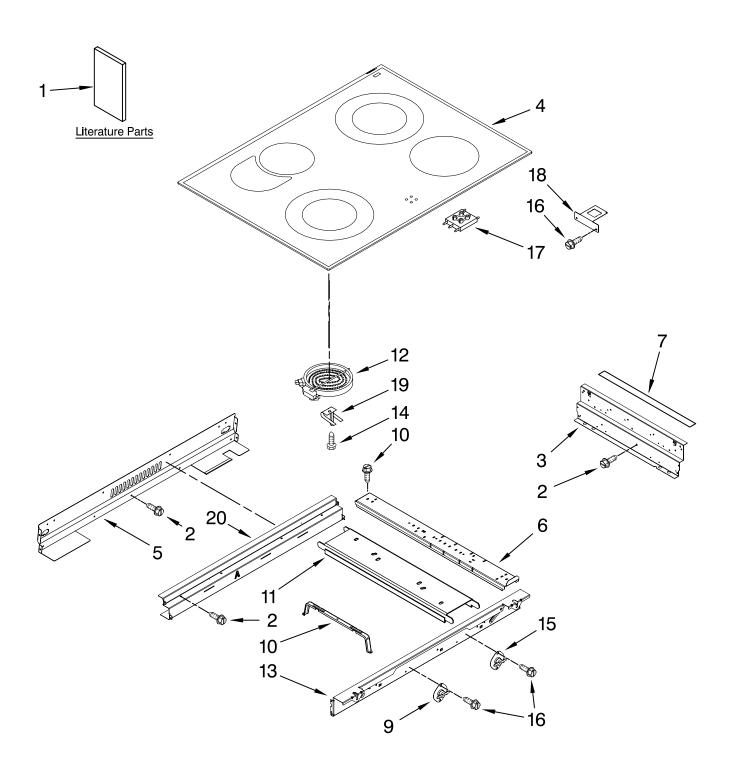

# **COOKTOP PARTS**

Illus No.	. Part No.	DESCRIPTION
1	W10118260	Literature Parts Installation Instructiions
	W10190622 W10220962 9763467 9757680	Use & Care Guide Tech Sheet Easy Set Guide Anti-Tip Instructions
	9762761 W10065852	Safe Cooking Tips English French
2	246119 9761422	Screw Frame, Cooktop Side
4	W10110271	Cooktop Black/Stainless
5	W10110269 9761724	White Cover, Cooktop Rear
6 7	9763517 W10076030	Rail, Element (2) Gasket (2)
9	9759944	Thermostat
10	9756821	Support, Wiring
11	9757825	Rail, Element
12		Center (1) Element, Surface
12	W10203294	LR/1000W
	4453909	LF,RR/1200W
40	8523696	RF/1800W
13	9761423	Frame, Cooktop Front
14	3196537	Screw
15	341196	Thermostat
16	3196160	Screw
17	8523739	Indicator Light, Hot Surface
18	9758799	Bracket, Indicator
40	0750004	Light
19 20	9759094 9761768	Spring, Locator Frame, Cooktop
20	3731700	Rear


### **OVEN PARTS**

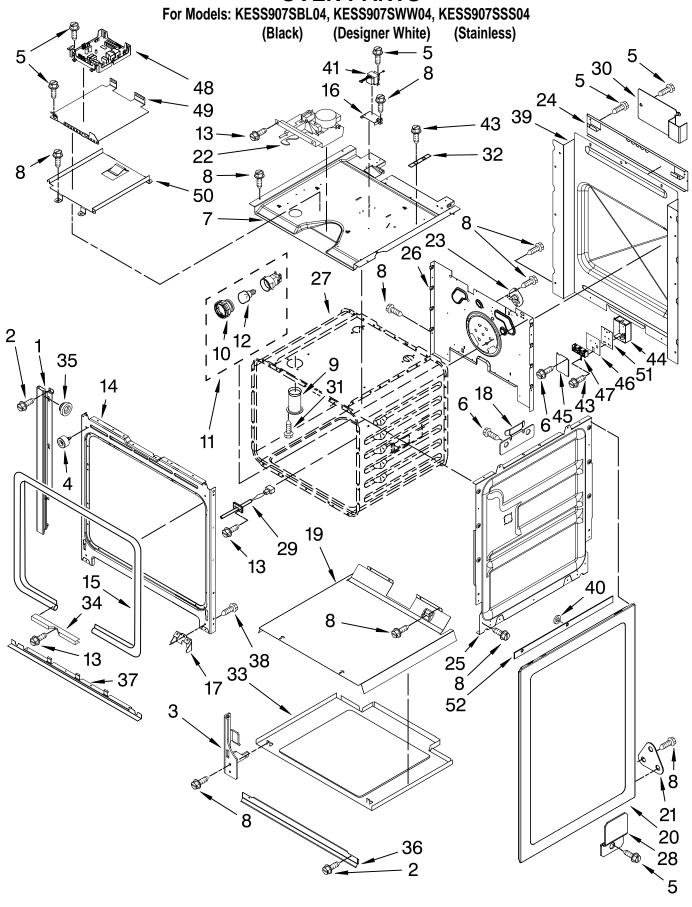

# **OVEN PARTS**

Illus No.		DESCRIPTION	Illus No.	. Part No.	DESCRIPTION	Illus No.		DESCRIPTION
1 2 3 4 5 6 7 8 9	3196537 3196160 8303099 4449809 4452158	White Stainless Left Black White Stainless Screw Hinge Receiver Right Left Bumper, Door (2) Screw Screw Top Chassis Screw Tube, Vent	18 19 20 21 22 23 24 25 26 27 28 29 30 31 32	9760723PB 9760723PW 9757461 W10195934 9759242 9757811 4455641 9759761 9759890 W10131825 9759945 3196176 9759885	White Bracket,Side Panel Latch, Motorized Thermostat Brace, Side Panel Side, Chassis Back, Chassis Liner, Oven (Not Serviceable) Clip, Side Panel Sensor Standoff, Rear Screw	38 39 40 41 43 44 45 46 47 48 49 50 51 52	9760481 W10111628 3400080 W10165135 9757405 9759721 9761958 W10181438 W10083460 9756454 9759884	Cover, Back Washer Transformer, Control
11 12 13 14 15 16	W10009930 4452166 4449154 W10115831 W10074200 9757829	Frame, Front Gasket, Door	34 35 36 37	4448933	Retainer, Gasket Grommet, Mounting Rail Vent, Bottom Upper Black White Stainless Vent, Bottom Lower Black White	INS	NOT ILL  ULATION  9756817	VING PARTS USTRATED  Insulation, Wrap Insulation, Back


# **DOOR PARTS**

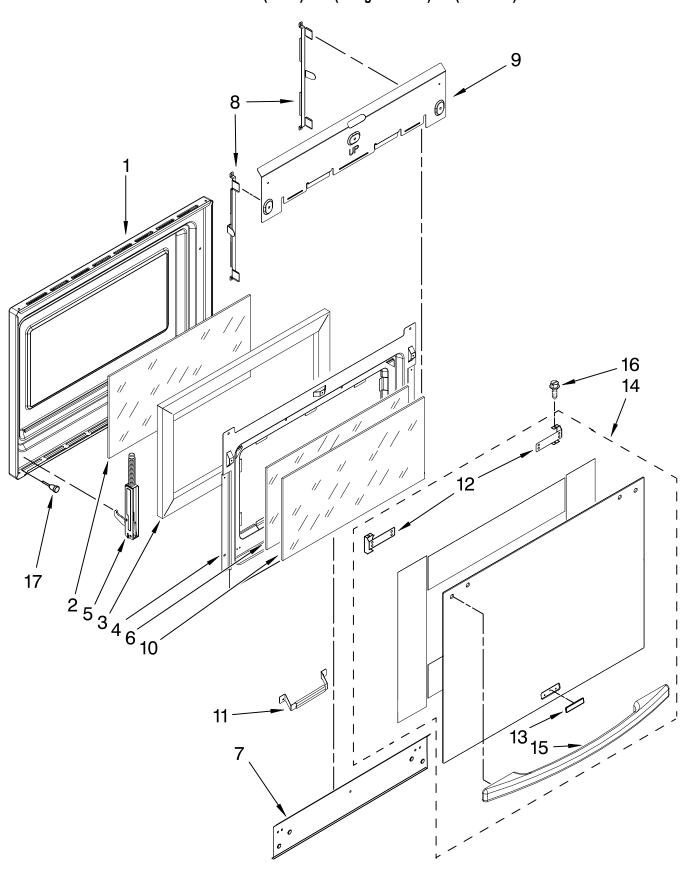

### **DOOR PARTS**


Illus No.	. Part No.	DESCRIPTION
1	9759413	Panel, Door
2		Glass, Inner
3	4451722	Insulation, Door
4		Retainer, Glass
5		Hinge, Oven Door
	9760579	
	9760580	
6	9759225	Glass, Inner
7		Shield, Heat
		Bottom
8	9759229	Bracket, Glass
		Side
9	4457104	Shield, Heat Top
10		Glass, Inner Door
11	9759230	
12		Bracket, Handle
	9763497	
	9763496	Left
13		Badge
	8304603BL	
	8304603WH	
	8304603SS	
14		Assembly, Door
		Kit
	W10131888	Black
	W10131889	
	W10155557	
15		Handle, Door
	8303774BL	
	8303774WH	
	8303774SS	
16	3196184	
17	4448520	Bumper, Door
		r - /

# **DRAWER PARTS**

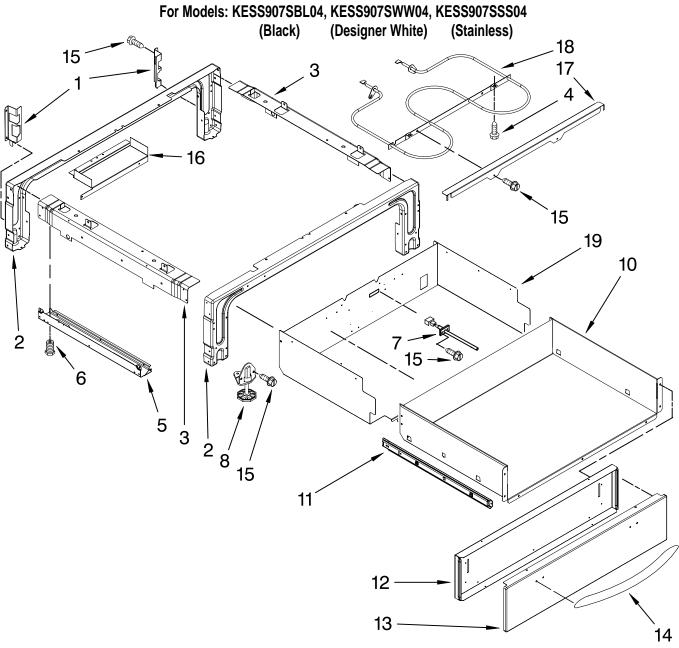


Illus No.	. Part No.	DESCRIPTION	Illus No.		DESCRIPTION	IIIu:   No		DESCRIPTION
1	9757687	0	5	9759953 9759954		14	9761573BL 9761573WH	White
2	9757686		6	W10058460		15	9761573SS	
2	9763501BL	Support, Front & Rear	8		Thermistor Foot Assembly	15 16	3196537 W10153100	Cover, Terminal
3		Brace, Drawer	10	W10164163	Drawer	17	9758676	Support, Element
	4453720 4453721		11	W10155633	Drawer Slide Right	18	9760775	Element, Warming Drawer
4	W10162096	Screw	12 13	W10155632 W10144431 W10203760 W10203762 W10203763	Panel, Drawer Front, Drawer Black White	19	9763518	Enclosure, Warming Drawer

### **CONTROL PANEL PARTS**

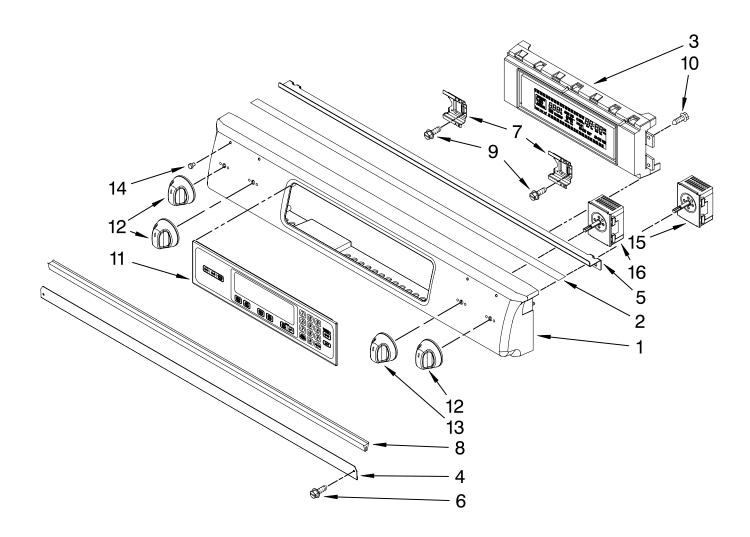


Illus No.	. Part No.	DESCRIPTION	Illus No.	. Part No.	DESCRIPTION	Illus No.		DESCRIPTION
1		Control Panel	7	9761745	Bracket,	13		Knob, Smart Single
	W10190660	Black			Thermostat (2)			RF
	W10190661	White	8	W10116195	Gasket, Vent		W10193259	Black
	W10190662	Stainless			Shield		W10193257	White
2	W10110246	Gasket, Console	9	3196537	Screw		W10156261	Stainless
3	W10181439	Control, Electric	10	9780271	Screw	14	3196068	Lens, Indicator
4	W10105370	Shield, Console	11	9761566	Membrane, Switch			Light
		Vent	12		Knob, Smart Dual	15	9763762	Duel Switch
5	W10117524	Bracket, Console			LF,LR,RR			LF,LR,RR
6	3196160	Screw		W10193255	Black	16	9763761	Single Switch
				W10193253	White			RF
				W10156260	Stainless			

INTERNAL OVEN PARTS
For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04 (Black) (Designer White) (Stainless)

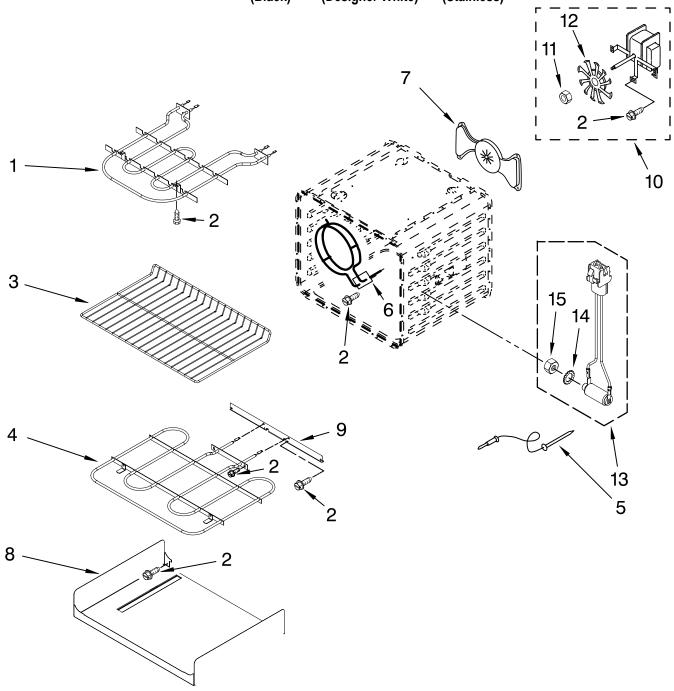

Illus. No.	Part No.	DESCRIPTION	Illus No.		DESCRIPTION	Illus No.		DESCRIPTION
1	9760774	Element, Broil	6	W10179152	Rack, Oven	11	4455037	Tray, Hidden Bake
2	4449154	•	7		Element, Bake	12		Cover, Bake Tray
3	9755543	Jack, Meat Probe	8		Probe, Meat	13	W10116228	Motor, Convection
4	9755547	Lock Washer	9	9760769	Element,	14	W10116349	Nut
5	9755546	Hex Nut			Convection	15	W10116351	Blade, Fan
			l 10	9756690	Cover Fan			

# **TOP VENTING PARTS**

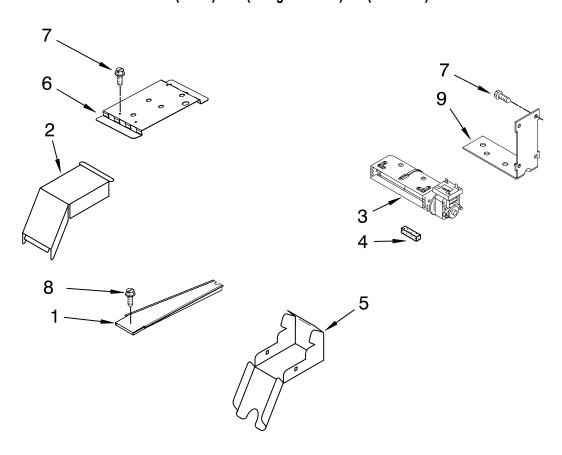

Illus	. Part	
No.	No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent Top
3	9759320	Blower
4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom
6	W10143041	Bracket, Terminal
		Box
7	4449809	Screw (2)
8	4449040	Screw
9	4455352	Bracket, Blower

### **OPTIONAL PARTS**

For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04 (Black) (Designer White) (Stainless)

Illus. Part
No. No. DESCRIPTION

Optional Parts Not Included

#### PAINT, TOUCH-UP (1/2oz.)

72017 White 261869 Cord Brown 72032 Black

#### PAINT, SPRAY

350930 White 261900 Citrine White 830864 Black

#### **ADHESIVE**

591014 Adhesive Loctite (1/3 oz.) 482338 Sealer, Silastic (3 oz.) Illus. Part

No. No. DESCRIPTION

#### SPLICING WIRES--25FT.

#### **LENGTH**

#### **WIRING HARNESS PARTS**

W10137680 Harness, Main W10137677 Harness, Cooktop Electric W10157935 Harness, Switch 9762921 Harness, Communication W10207713 Bushing, Snap 9763481 Harness, Ground Strap Edge Protector W10123242 19mm W10127413 38mm 313660 Clip, Ground Wire W10177363 Grommet, Flex 60mm W10155291 Connector, Flex 9757778 Bushing, Snap, Split 1" W10076020 Gasket 4449809 Screw 7103P027-60 Nut 4450800 Screw, Ground

3400015 Screw, Ground

Illus. Part
No. No. DESCRIPTION

#### **Miscellaneous**

9782676 Anti-Tip Assembly Filler, Counter Top W10113902A Black W10113903A White W10113901A Stainless